


i10&i10V&i10D

Mini SIP Intercom Quick Installation Guide




1 Package Contents

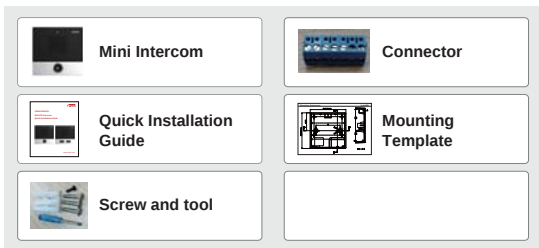

2 Physical specification


Device size	88 x 88 x 31 (mm)
i10	No camera, 1 button
i10V	With camera, 1 button
i10D	No camera, 2 button

1) Panel

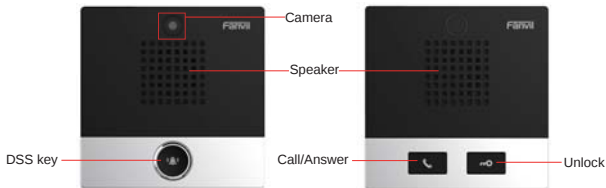

2) Interface description

Open the rear case of the device, there is a row of terminal blocks for connecting the power supply, indoor switch. The connection is as follows:

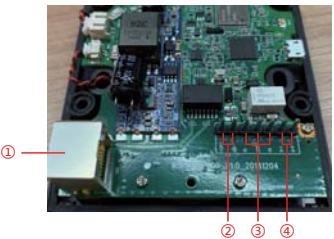

Serial number	Description
1	Ethernet interface: standard RJ45 interface, 10/100M adaptive, it is recommended to use five or five types of network cable
2	Power interface: 12V/1A input
3	A set of short-circuit output interfaces
4	A set of short-circuit input interfaces

3) Installation Diagram

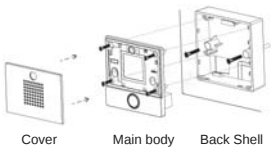


Figure 3-1 Three Major Parts of i10&i10V

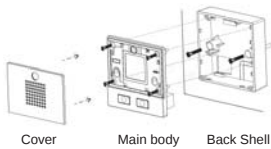


Figure 3-2 Three Major Parts of i10D

1) **Wall Mount:** Attach the installation dimension drawing to the position to be installed, use the electric drill to punch the hole in the 2 screw holes marked, and use the hammer to drive the screw into the drilled hole.

Built-in: Attach the installation dimension drawing to the position to be installed, open a groove of the same size according to the size, use the electric drill to punch the hole in the 2 screw holes marked, and use the hammer to drive the screw into the drilled hole.

- 2) Remove the cover;
- 3) Use a screwdriver to remove the 4 screws on the main body to separate the main body from the rear case;
- 4) Pass all the wires through the hole in the lower right corner of the bottom case. All lines must be reserved for a length of 15~20CM;
- 5) **Wall Mount:** Align the bottom case with the position of the screw hole that was previously punched on the wall, and screw in the two screws with a screwdriver to fix the bottom case to the wall;
- Built-in:** Place the bottom case into the previously opened groove and screw in the two screws with a screwdriver to secure the bottom case to the wall;
- 6) Test whether there is electricity by doing the following:
Long press DSS key for 3 seconds(after power-on for 30 seconds), and when the speaker beeps rapidly, press DSS key again quickly, the beeps stop ,the intercom will report the IP address by itself. If the work is normal, continue with the next steps.
- 7) Lock the 4 screws removed in step 3;
- 8) Cover the cover removed in step 2;

4) Searching Mini Intercom

There are two methods as shown below to search the device.

Methods 1:

Open the iDoorPhone Network Scanner, click the Refresh button to search the device and find the IP address.

(Download address <http://download.fanvil.com/tool/iDoorPhoneNetworkScanner.exe>)



Method 2:

Long press DSS key for 3 seconds(after power-on for 30 seconds), and when the speaker beeps rapidly, press DSS key again quickly, the beeps stop ,the intercom will report the IP address by itself.

In addition, device provides the device surface DSS key operation to switch IP address acquisition mode:

In the standby mode, long-press the speed dial button for 3 seconds and the beep will last for 5 seconds. Within 5 seconds, press the speed dial button three times quickly to switch to the network mode.

If it is in the mode of DHCP and doesn't receive the IP address, switch it to the mode of static IP (192.168.1.128), broadcast the IP address after the successful switch.

If it is in the mode of static IP address (192.168.1.128), switch it to the DHCP mode, broadcast the IP address after the successful switch.

If it is in the mode of DHCP and obtain the IP address, the mode will not be switched and directly broadcast the IP.

5) Mini Intercom Configuration

Step 1: Log in the WEB admin interface of the device

Input IP address (e.g.http://172.18.70.55) into address bar of PC's web browser.

The default user name and password are both admin



Step 2: Add SIP account

Set SIP server address, port, user name, password and SIP user with assigned SIP account parameters. Select <enable registration>, click <Apply> to take effect.



Step 3: Set DSS key

Set DSS key speed dial parameters, as shown below, click "Apply" to save this setting.

Type: Hot key.

Number 1: The DSS Key will dial to this Number 1.

Number 2: If number 1 is unavailable, it will be transferred to number 2.

Line: Working line.

Subtype: Speed Dial.

The screenshot shows the 'DSS Key Settings' page in a web interface. On the left is a red sidebar with navigation links: System, Network, Line, Intercom settings, Playback, Executive key, Security, Device Log, and Security Settings. The 'Intercom settings' link is selected. The main content area has tabs for 'DSS Key' and 'Advanced'. The 'DSS Key' tab is active, displaying a table for 'DSS Key Settings'.

No.	Type	Name	Value	Subtype	Line	Media
DSS Key 1	Hotkey	Speed Dial	Speed Dial	Speed Dial	2 (SIP1)	2 (SIP1)
DSS Key 2	Hotkey			Speed	2 (SIP1)	2 (SIP1)
DSS Key 3	Hotkey			Speed	2 (SIP1)	2 (SIP1)

Below the table is an 'Apply' button.

Step 4: Set the Intercom parameters

The screenshot shows the 'Intercom Settings' page in a web interface. The left sidebar is the same as in the previous screenshot. The main content area has tabs for 'DSS Key', 'Intercom settings', 'Playback', 'Executive key', 'Security', 'Device Log', and 'Security Settings'. The 'Intercom settings' tab is active, displaying various configuration options.

Basic Settings

- Enable Call Waiting: ☒
- Enable Auto on Hook: ☒
- Enable Short Mode: ☒
- Line Outgoing: ☒
- Default Auto Mode: ☒
- Enable Restricted Outgoing: ☒
- Enable Restricted Outgoing Call: ☒
- Country Code:
- Allow 911 Call: ☒
- Default Active (911) Source: ☒
- Line Outgoing Format:
- Call Number:

Intercom Settings

- Auto Intercom Call:
- Enable Mode for Ring: ☒
- Default Call Mode: ☒
- Enable Allowed Outgoing Call: ☒
- Enable Country Code:
- Area Code:
- High IP Traffic:
- Push 911, Server: ☒
- Connect An Active Call Type:

Step 5: Set the security function

1 set of short-circuit input and output settings, tamper alarm server settings.

Basic Settings

Engine Location:

Input & Tamper Alarm Address:

Message ID:

Report Settings

Triggered by STM Relay: ☐

Triggered by I/O Modules: ☐

Triggered by I/O Modules: ☐

Triggered by I/O Modules

Module	Status	Triggered by I/O	Triggered by I/O
I/O Modules	Status	Triggered by I/O	Triggered by I/O



Fanvil Technology Co., Ltd

Add: 4F, Block A, Building 1#, GaoXinQi Hi-Tech Park (Phase-II),
67th District, Bao'An, Shenzhen, China

Tel:0755-2640-2199 Fax:0755-2640-2618 Email:sales@fanvil.com