


IP Door Phone Quick Installation Guide



Table of Contents

1. Package Contents - - - - -	4
2. Physical Specifications - - - - -	4
3. Installation - - - - -	8
4. Searching Door Phone - - - - -	11
5. SIP Door Phone Setting - - - - -	12
6. Door Unlocking Setting - - - - -	13


1.Package Contents



2.Physical Specifications

Device size	160 x 93 x 35 mm
Weight	450g (gross weight)

(1)Front Panel

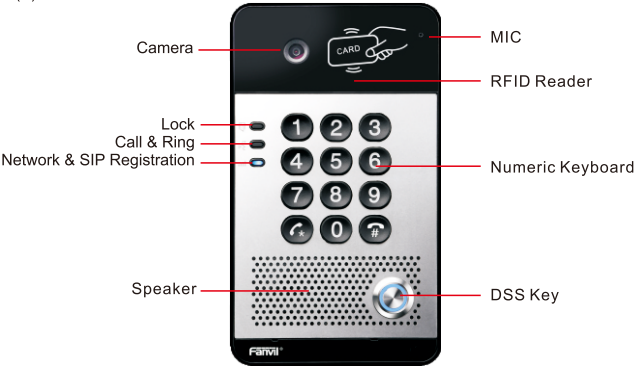

Interface	Description
Camera	Get the video
Speaker	The door phone has a built-in speaker for convenient communication and alert use.
MIC	The door phone has a built-in microphone hidden in the pinhole located on the front panel.
RFID Reader	Use RFID cards to unlock the door by touching RFID reader of device.

Button Definition


Button	Description
DSS Key	Press the Button, calling or request to open the door.
Numeric Keyboard	Input password to open the door or call.

LED Definition

LED	Status	Description
 Lock	Steady Blue	Door unlocking
	off	Door locking
 Call & Ring	Blinks per second	Call Hold or Ringing
	off	On Hook
	Blinks every 3 seconds	Device in the issuing state
	Steady Blue	Online talking
 Network & SIP Registration	Blinks per second	Network error
	off	Network is normal, SIP is not registered
	Blinks every 3 seconds	SIP Registration failed
	Steady Blue	SIP Registration succeeded

(2)Port Definition

After removing the Back Panel of i30, there are one terminal block connectors for power and lock control connection as shown in the picture below.

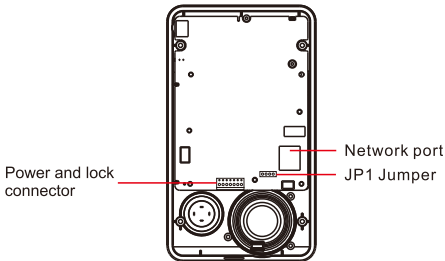

Network Connector



Power and Electric-lock Connector



1	2	3	4	5	6	7
+DC12V	VSS	NC	COM	NO	S-IN	S-OUT
12V DC Input		Electric-lock switch			Indoor switch	

Jp1 Jumper

There are two modes for power supply of electric-lock as shown in the picture below. (The default is "Passive Mode").

Passive Mode: When the electric-lock starting current is more than 12V/500mA, need to use the external drive mode, the electric lock interface for short circuit output control.

Active Mode : When the electric-lock starting current is less than 12V/500mA, can use the internal drive mode, the electric lock interface is 12V DC output..



Jumper in passive mode

Jumper in active mode

Wiring instructions

NO: Normally Open Contact

COM: Common Contact

NC: Normally Close Contact

Driving Mode		Electric-lock Mode		Jp1 Jumper	Connections
Active	Passive	No electricity when open	Electrify when open		
✓		✓		Active Mode 	12V Power Supply 12V/1A Electric-lock(NO electricity when Open the door)
✓			✓	Active Mode 	12V Power Supply 12V/1A Electric-lock(When the power to open the door)
	✓	✓		Passive Mode 	Door Phone Power Input 12V/2A Power Supply Electric-lock(NO electricity when Open the door)
	✓		✓	Passive Mode 	Door Phone Power Input 12V/2A Power Supply Electric-lock(When the power to open the door)
	✓	✓		Passive Mode 	External Power Supply 12V/2A Power Supply Electric-lock(Without power to open the door)

3.Installation

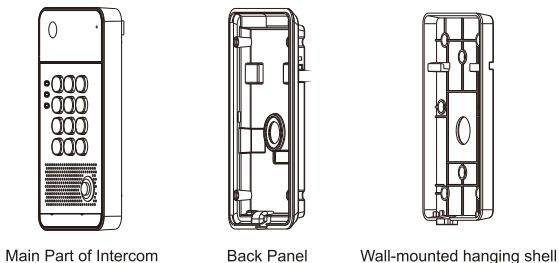


Figure 1 Three Major Parts of i30

Step 1: Installation preparation


A. Check the following contents:

- > Hex wrench x 1
- > RJ45 plugs x 2 (1 spare)
- > KA4 x 25mm screws x 4
- > 25mm screw anchors x4

B. Tools that may be required:

- > Hex wrench
- > Phillips screwdriver (Ph2 or Ph3), hammer, RJ45 crimper
- > Electric impact drill with an 6mm drill bit

Step 2: Drilling

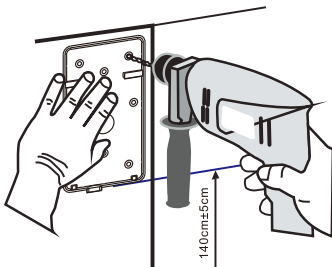

- A. Place the mounting template with dimensions on the surface of a wall in a desired flat position.
- B. Use an electric drill to drill the 4 holes marked on the mounting template. It is recommended to drill about 30mm deep. Remove the template when finishing drilling.
- C. Push or hammer screw anchors into the drilled holes.

Figure 2 Wall Mounting

Step 3: Removing hanging shell

A. Remove the hanging shell in Figure 3 and Figure 4.



Figure 3

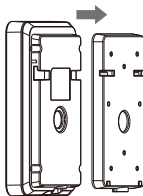


Figure 4

B. With Phillips screwdriver, unpacks the Back Panel and the main part of intercom as shown in Figure 5.

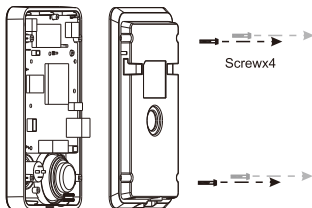


Figure 5

Step 4: Hanging shell Fixing and Cabling

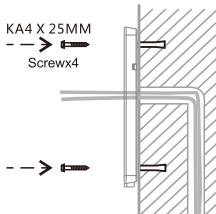


Figure 6

A. Select the hole for cable supply; cable length of 15cm to 20cm is recommended.

B. With 4 KA5 x 25mm screws, tighten the Wall-mounted hanging shell as shown in Figure 6.

Step 5: Connection line

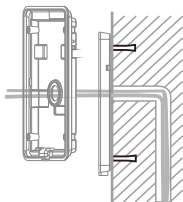


Figure 7

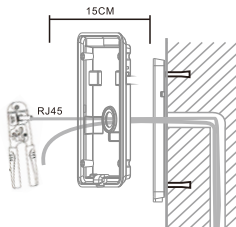


Figure 8

A. Select the hole for cable supply.

B. Connect the cables of RJ45, power, and electric-lock to the motherboard socket as mentioned in connectors description (refer to Section 2).

C. Test whether there is electricity by doing the following:

Press the # button for 3 seconds to get the IP address of intercom by voice.

Input access password or press the indoor switch to check electric-lock installation.

Note: Do not proceed mounting until you have finished the electric checking.

Step 6: Mounting

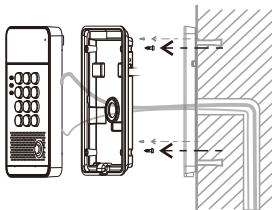


Figure 9

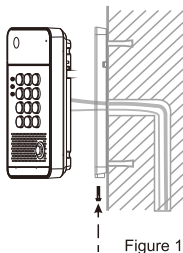


Figure 10

A. Use the 4 screws to tighten the main part of intercom on the back panel as shown in Figure 9.

B. Push the device into the Wall-mounted hanging shell and tighten it with 1 screw as shown in Figure 10.

C. Make sure the screws have been tightened properly for better waterproof effect.


4.Searching Door Phone

There are two methods as shown below to search the i30.

Method 1:

Open the iDoorPhone Network Scanner. Press the Refresh button to search the i30 and find the IP address.

(Download address:<http://downloadanvil.com/tool/iDoorPhoneNetworkScanner.exe>)

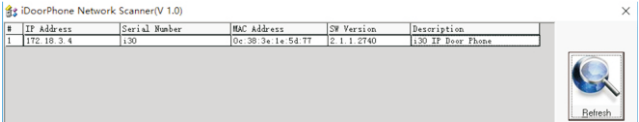

Method 2:


Press and hold the “#” key for 3 seconds and the door phone will report the IP address by voice.



Default Setting	
Default DHCP Client	Enable
Static IP Address	192.168.1.128
Default Web Port	80
Default Login User Name	admin
Default Login Password	admin
Display IP address	Hold # for 3 seconds to display by voice
Search Tools	iDoorPhone Network Scanner

5.SIP Door Phone Setting

Step 1: Login the homepage of the i30.

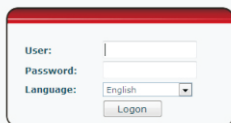

User:


Password:

Language: English

Step 2: Add the SIP account.

Set SIP server address, port, user name, password and SIP user with assigned SIP account parameters.

Select "Activate", and then click Apply to save this setting.

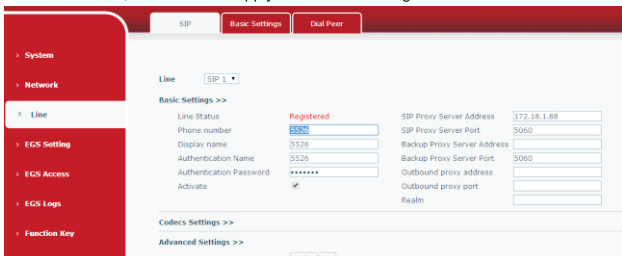

SIP Basic Settings Dial Peer

Line: SIP 1

Basic Settings >>

Line Status: Registered

Phone number: 5526

Display name: 5526

Authentication Name: 5526

Authentication Password: *****

Activate: ☒

SIP Proxy Server Address: 172.18.1.88

SIP Proxy Server Port: 5060

Backup Proxy Server Address:

Backup Proxy Server Port: 5060

Outbound proxy address:

Outbound proxy port:

Realm:

Codecs Settings >>

Advanced Settings >>

Apply

Step 3: Setting DSS key

Set the DSS key as shown below for a quick start. Click "Apply" to save this setting.


Type: Hot Key

Number 1: The DSS Key will dial to this Number 1.

Number 2: If Number 1 is unavailable, it will be forwarded to Number 2.

Line: Working line

Subtype: Speed dial

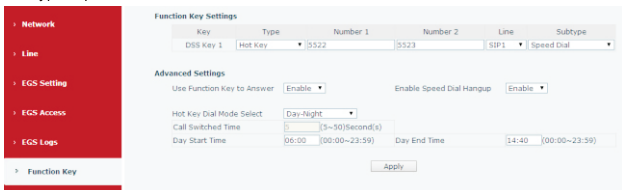

Function Key Settings

Key	Type	Number 1	Number 2	Line	Subtype
DSS Key 1	Hot Key	5522	5523	SIP 1	Speed Dial

Advanced Settings

Use Function Key to Answer: Enable

Enable Speed Dial Hangup: Enable

Hot Key Dial Mode Select: Day-Night

Call Switched Time: 5 (3~50)Second(s)

Day Start Time: 06:00 (00:00~23:59)

Day End Time: 14:40 (00:00~23:59)

Apply

Step 4: Door Phone Setting

The screenshot shows the 'Features' tab of a device configuration interface. On the left is a sidebar with a tree view containing: System, Network, Line, EGS Setting (selected), EGS Access, EGS Logs, and Function Key. The main area is titled 'Common Settings' and contains two columns of configuration options. The 'Local password' field is highlighted with a red box. An 'Apply' button is at the bottom right.

Feature	Value
Switch Mode	Monostable
Enable Card Reader	Enable
Limit Talk Duration	Enable
Remote Password	*
APP Door Open	Disable
Enable Indoor Open	Enable
Description	30 IP Door Phone
Address of Open Log Server	0.0.0.0
Door Unlock Indication	Long Beeps
Switch-On Duration	5 (1~600)Second(s)
Card Reader Working Mode	Normal
Talk Duration	120 (20~600)Second(s)
Local password	****
APP Password	*
Enable Access Table	Enable
Enable Open Log Server	Disable
Port of Open Log Server	514
Remote Code Check Length	4 (1~11)

6. Door Unlocking Setting

Local

(1) Local Password

Step 1: Go to EGS Setting → Features → Set Local Password (The default is “6789”).
Step 2: Use the device's Numeric Keyboard to input password and “#” key, and then the door will be unlocked.

This screenshot is identical to the one above, showing the 'Features' tab with the 'Local password' field highlighted. It provides a second view of the configuration interface for the door phone settings.

(2) Private Access Code

Step 1: Go to EGS Access → Access Rule → set Access Code.

Step 2: Use the device's Numeric Keyboard to input password and “#” key, and then the door will be unlocked.

Click here to Save Access Table

Total: 1 Prev Page: 1 Next

☐	Index	Name	ID	Department	Position	Location	Number	Fwd Number	Access Code	Double Auth	Profile	Type	Issuing Date	Card State
☒	1	Hugo	0001231231						1234	Disable	None	Guest	2017/08/01 15:41:14	Enable

Add Access Rule

Name: Hugo Location:

ID: 0001231231 Number:

Card State: Enable Fwd Number:

Department: Access Code: 1234

Position: Double Auth: Disable

Type: Guest Profile: None

Add Modify

Remote

Remote Password

Step 1: Go to EGS Setting → Features → Set Remote Password (The default is “**”).

Step 2: To answer the call made by visitor via SIP phone, press the “*” key to unlock the door the visitor.

Features Audio Video MCAST Action URL Time/Date

Common Settings

Switch Mode: Monostable Switch-On Duration: 5 (1~600) Second(s)

Enable Card Reader: Enable Card Reader Working Mode: Normal

Limit Talk Duration: Enable Talk Duration: 120 (20~600) Second(s)

Remote Password: * Local password: ****

APP Door Open: Disable APP Password: *

Enable Indoor Open: Enable Enable Access Table: Enable

Description: 30 IP Door Phone Enable Open Log Server: Disable

Address of Open Log Server: 0.0.0.0 Port of Open Log Server: 514

Door Unlock Indication: Long Beeps Remote Code Check Length: 4 (1~11)

RFID Card

Step 1: Go to EGS Access → Enter the Name and ID Number (Only Front 10 yards) → Press Add to Access Table.

Step 2: Use pre assigned RFID cards to unlock the door by touching RFID area of device.

Click here to Save Access Table

Total: 1 Prev Page: 1 Next

☐	Index	Name	ID	Department	Position	Location	Number	Fwd Number	Access Code	Double Auth	Profile	Type	Issuing Date	Card State
☒	1	Hugo	0001231231						1234	Disable	None	Guest	2017/08/01 15:41:14	Enable

Add Access Rule

Name: Hugo Location:

ID: 0001231231 Number:

Card State: Enable Fwd Number:

Department: Access Code: 1234

Position: Double Auth: Disable

Type: Guest Profile: None

Add Modify

Fanvil