

Video Door Phone

Quick Installation Guide



Table of Contents

1. Package Contents.....	1
2. Physical Specifications.....	1
3. Installation.....	5
4. Searching Door Phone.....	8
5. SIP Door Phone Setting.....	9
6. Door Unlocking Setting.....	10

1. Package Contents



Door Phone



Connectors



Quick Installation
Guide



Mounting Template



RFIC Cards




Screw and Wrench

2. Physical Specifications

Device size	223 x 130 x 74mm
Weight	1800g

1) Front Panel

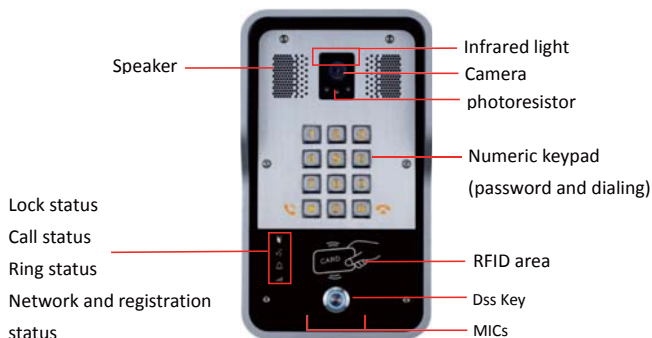

Interface	Description
Camera	Get the video.
Infrared light & Photoresistor	The Compensate for lack of ambient light
Speaker	The door phone has a built-in speaker for convenient communication and alert use.
MIC	The door phone has a built-in microphone hidden in the pinhole located on the front panel.
RFID Reader	Use RFID cards to unlock the door by touching RFID reader of device.

Button Definition


Button	Description
DSS Key	Press the Button, calling or request to open the door.
Numeric Keyboard	Input password to open the door or call.

LED Definition

LED	Status	Description
 Lock	Steady Blue	Door unlocking
	off	Door locking
 Call	Blinks per second	Hold
	Steady Blue	Call Hold
	off	On Hook
 Ring	Steady Blue	Ringling
	off	On Hook
 Network & SIP Registration	Blinks per second	Network error
	off	Network is normal, SIP is not registered
	Blinks every 3 seconds	SIP Registration failed
	Steady Blue	SIP Registration succeeded

2) Port Definition

After removing the Back Panel of device, there are one terminal block connectors for power and lock control connection as shown in the picture below.

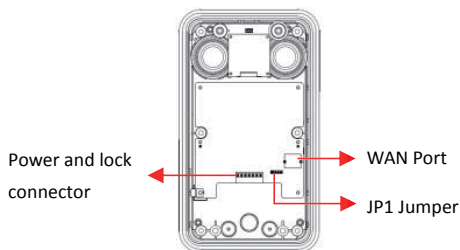

Network Connector



Power and Electric-lock Connector



1	2	3	4	5	6	7
+DC12V	VSS	NC	COM	NO	S-IN	S-OUT
12V DC Input		Electric-lock switch			Indoor switch	

JP1 Jumper

There are two modes for power supply of electric-lock as shown in the picture below.
(The default is “**Passive Mode** ”).

Passive Mode: When the electric-lock starting current is more than 12V/500mA, need to use the external drive mode, the electric lock interface for short circuit output control.

Active Mode : When the electric-lock starting current is less than 12V/500mA, can use the internal drive mode, the electric lock interface is 12V DC output.



Jumper in passive mode



Jumper in active mode

Wiring instructions

NO: Normally Open Contact

COM: Common Contact

NC: Normally Close Contact

Driving Mode		Electric-lock Mode		JP1 Jumper	Connections
Active	Passive	No electricity when open	Electrify when open		
✓		✓		Active Mode 1/2 3/4	12V Power Supply 12V/1A Indoor switch Electric-lock(NO electricity when Open the door)
✓			✓	Active Mode 1/2 3/4	12V Power Supply 12V/1A Indoor switch Electric-lock(When the power to open the door)
	✓	✓		Passive Mode 1/2 3/4	Door Phone Power Input Power Supply 12V/2A Indoor switch Electric-lock(NO electricity when Open the door)
	✓		✓	Passive Mode 1/2 3/4	Door Phone Power Input Power Supply 12V/2A Indoor switch Electric-lock(When the power to open the door)
	✓	✓		Passive Mode 1/2 3/4	External Power Supply Door Phone Power Input Indoor switch Electric-lock(Without power to open the door)

3. Installation

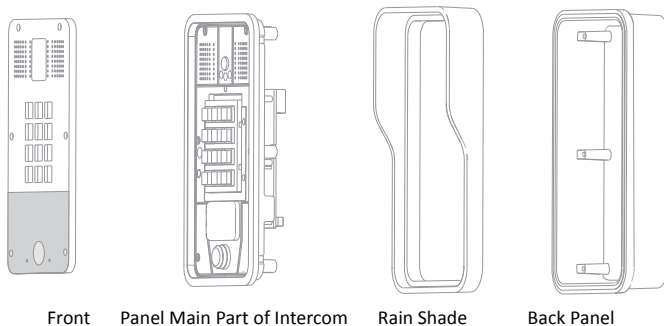


Figure 1 Three Major Parts of i31S

Step 1: Installation preparation

A. Check the following contents:

- Hex wrench x 1
- RJ45 plugs x 2 (1 spare)
- TA5 x 40mm screws x 4
- 35mm screw anchors x4

B. Tools that may be required:

- Hex wrench
- Phillips screwdriver (Ph2 or Ph3), hammer, RJ45 crimper
- Electric impact drill with an 6mm drill bit

Step 2: Drilling

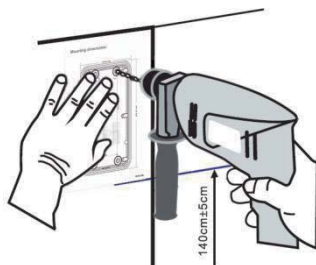


Figure 2 Wall Mounting

- Place the mounting template with dimensions on the surface of a wall in a desired flat position.
- Use an electric drill to drill the 4 holes marked on the mounting template. It is recommended to drill about 50mm deep. Remove the template when finishing drilling.
- Push or hammer screw anchors into the drilled holes.

Step 3: Removing hanging shell

- A. With L-shaped screwdriver, unpack the front panel as diagram (3) (Counter-clockwise) and (4)

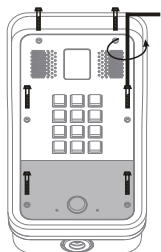


Figure 3

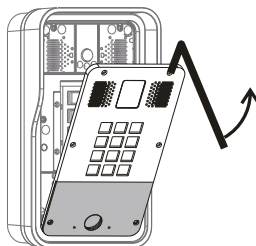


Figure 4

- B. After taking off the 6 conductive sponges in the plastic shell, use the cross screwdriver to remove the 6 screws on the plastic shell and remove the rain cover from the plastic shell. Then separate the plastic shell from the rear shell as diagram (5).

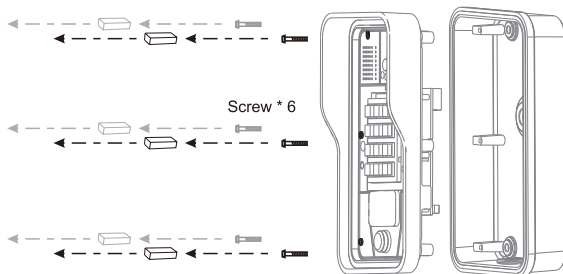


Figure 5

Step 4: Back panel fixing and cabling

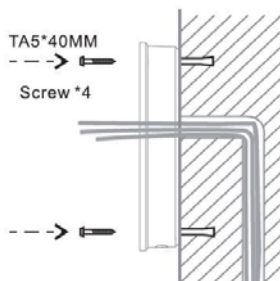


Figure 6

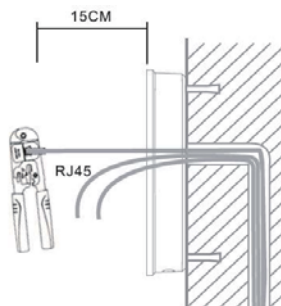


Figure 7

- A. Select the hole for cable supply, 15cm to 20cm cable length is recommended.

Note: The direction of the cable hole on back panel is pointing down.

- B. With 4 TA5*40mm screws, tighten the back panel on the wall as diagram (6).
- C. Connect the cables of RJ45, power, and electric-lock to the motherboard socket as mentioned in connectors description (refer to Section 2).
- D. Test whether there is electricity by doing the following:
 Press the # button for 3 seconds to get the IP address of intercom by voice.
 Input access password or press the indoor switch to check electric-lock installation.
Note: Do not proceed mounting until you have finished the electric checking.

Step 4: Mounting

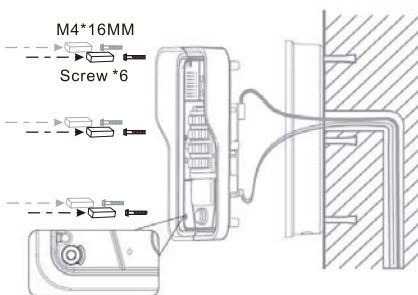


Figure 8

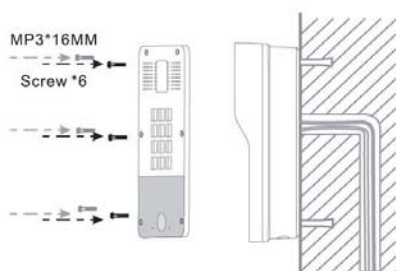


Figure 9


- A. After locking the 6 screws into the corresponding position of the plastic housing, the 6 conductive sponges is loaded into a screw hole. As shown in Fig. 8, the rear shell is locked.
 Note: This sponge can enhance the ESD protection function of the product. Kindly suggest that it should not be ignored!
- B. Push the front panel into the plastic frame, and tighten it with 6 screws as diagram (9).
 Note: Make sure the screws have been tightened properly for better waterproof effect.

4. Searching Door Phone

There are two methods as shown below to search the device.

Method 1:


Open the iDoorPhone Network Scanner. Press the Refresh button to search the device and find the IP address.

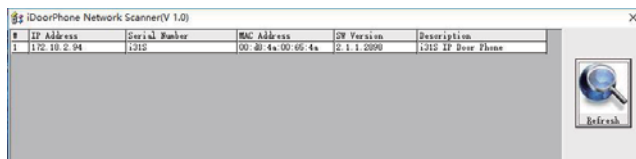

Method 2:

Press and hold the “#” key for 3 seconds and the door phone will report the IP address by voice.

In addition device provides the device surface DSS key operation to switch IP address acquisition mode: long press the DSS key for 10 seconds, to be issued by the speaker Beep, and then press the DSS key three times, the beep stops. Wait 10 seconds, after the success of the system automatically broadcast the current IP address.

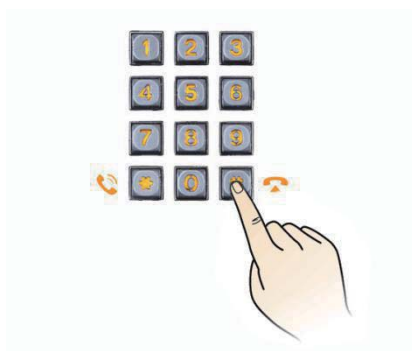

Default Setting	
Default DHCP Client	Enable
Static IP Address	192.168.1.128
Default Web Port	80
Default Login User Name	admin
Default Login Password	admin
Display IP address	Hold # for 3 seconds to display by voice
Search Tools	iDoorPhone Network Scanner

5. SIP Door Phone Setting

Step 1: Log in the door phone

Input IP address (e.g. http://192.168.1.149) into address bar of PC's web browser.

The default user name and password are both admin.



A login form with a red header bar. It contains three input fields: 'User:', 'Password:', and 'Language:'. The 'Language:' field has a dropdown menu showing 'English'. Below the fields is a 'Logon' button.

Step 2: Add the SIP account.

Set SIP server address, port, user name, password and SIP user with assigned SIP account parameters.

Select "Activate", and then click Apply to save this setting.



The screenshot shows the 'SIP' configuration page with the 'Basic Settings' tab selected. On the left is a red sidebar with a menu: System, Network, Line (selected), EGS Setting, EGS Access, EGS Logs, and Function Key. The main content area has a 'Line' dropdown set to 'SIP 1'. Below it are sections for 'Basic Settings >>', 'Codecs Settings >>', and 'Advanced Settings >>'. The 'Basic Settings' section includes fields for Line Status (Registered), Phone number (5526), Display name (5526), Authentication Name (5526), Authentication Password (*****), and an 'Activate' checkbox which is checked. To the right are fields for SIP Proxy Server Address (172.18.1.88), SIP Proxy Server Port (5060), Backup Proxy Server Address, Backup Proxy Server Port (5060), Outbound proxy address, Outbound proxy port, and Realm. An 'Apply' button is at the bottom.

Step 3: Setting DSS key

Set the DSS key as shown below for a quick start. Click "Apply" to save this setting.


Type: Hot Key

Number 1: The DSS Key will dial to this Number 1.

Number 2: If Number 1 is unavailable, it will be forwarded to Number 2.

Line: Working line

Subtype: Speed dial

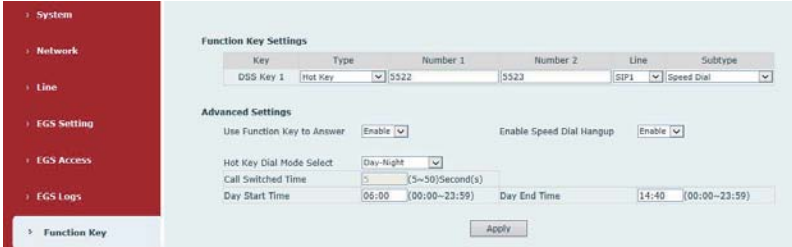

The screenshot shows the 'Function Key Settings' page. The left sidebar is the same as in the previous screenshot. The main content area has a 'Function Key Settings' section with a table. The table has columns: Key, Type, Number 1, Number 2, Line, and Subtype. The first row is 'DSS Key 1' with Type 'Hot Key', Number 1 '5522', Number 2 '5523', Line 'SIP1', and Subtype 'Speed Dial'. Below the table is an 'Advanced Settings' section with three 'Enable' checkboxes: 'Use Function Key to Answer', 'Enable Speed Dial Hangup', and 'Enable Speed Dial'. There are also dropdowns for 'Hot Key Dial Mode Select' (Day-Night) and 'Call Switched Time' (5-30/Second(s)). At the bottom are 'Day Start Time' (06:00-23:59) and 'Day End Time' (14:40-23:59) fields. An 'Apply' button is at the bottom.

Step 4: Door Phone Setting

System

Network

Line

EGS Setting

EGS Access

EGS Logs

Function Key

Alert

Features Audio Video MCAST Action URL Time/Date

Common Settings

Switch Mode: Nonstable

Enable Card Reader: Enable

Limit Talk Duration: Enable

Remote Password:

APP Door Open: Disable

Enable Indoor Open: Enable

Description: JIS(JIS/5523)

Address of Open Log Server: 0.0.0.0

Door Unlock Indication: Long Beeps

Switch-On Duration: 5 (1~600)Second(s)

Card Reader Working Mode: Normal

Talk Duration: 120 (20~600) Second(s)

Local password: *****

APP Password: ~

Enable Access Table: Enable

Enable Open Log Server: Disable

Port of Open Log Server: 514

Remote Code Check Length: 4 (1~11)

Apply

Basic Settings >>

Block Out Settings >>

6. Door Unlocking Setting

Local

1) Local Password

Step 1: Go to EGS Setting → Features → Set **Local Password** (The default is “6789”).

Step 2: Use the device's **Numeric Keyboard** to input **password** and “#” key, and then the door will be unlocked.

System

Network

Line

EGS Setting

EGS Access

EGS Logs

Function Key

Alert

Features Audio Video MCAST Action URL Time/Date

Common Settings

Switch Mode: Nonstable

Enable Card Reader: Enable

Limit Talk Duration: Enable

Remote Password:

APP Door Open: Disable

Enable Indoor Open: Enable

Description: JIS(JIS/5523)

Address of Open Log Server: 0.0.0.0

Door Unlock Indication: Long Beeps

Switch-On Duration: 5 (1~600)Second(s)

Card Reader Working Mode: Normal

Talk Duration: 120 (20~600) Second(s)

Local password: *****

APP Password: ~

Enable Access Table: Enable

Enable Open Log Server: Disable

Port of Open Log Server: 514

Remote Code Check Length: 4 (1~11)

Apply

Basic Settings >>

Block Out Settings >>

2) Private Access Code

Step 1: Go to **EGS Access** → **Access Rule** → set **Access Code**.

Step 2: Use the device's **Numeric Keyboard** to input **password** and **"#"** key, and then the door will be unlocked.

Access Table >>

Total: 1 Prev Page: 1 Next

[Click here to Save Access Table](#)

[Delete](#) [Delete All](#)

Index	Name	ID	Department	Position	Location	Number	Fird Number	Access Code	Double Auth	Profile	Type	Issuing Date	Card State
1	BBK							1234	Disable	None	Guest		Enable

Add Access Rule

Name: Location:

ID: Number:

Card State: Fird Number:

Department: Access Code:

Position: Double Auth:

Type: Profile:

[Add](#) [Modify](#)

Remote

Remote Password

Step 1: Go to **EGS Setting** → **Features** → Set **Remote Password** (The default is **"*"**).

Step 2: To answer the call made by visitor via SIP phone, press the **"*"** key to unlock the door the visitor.

Features Audio Video MCAST Action URL Time/Date

Common Settings

Switch Mode: Switch-On Duration: (1~600) Second(s)

Enable Card Reader: Card Reader Working Mode:

Limit Talk Duration: Talk Duration: (20~600) Second(s)

Remote Password: Local password:

APP Door Open: APP Password:

Enable Indoor Open: Enable Access Table:

Description: Enable Open Log Server:

Address of Open Log Server: Port of Open Log Server:

Door Unlock Indication: Remote Code Check Length: (1~11)

[Apply](#)

Basic Settings >>

Block Out Settings >>

RFID Card

Step 1: Go to **EGS Access** → Enter the Name and ID Number (Only Front 10 yards) → Press **Add** to Access Table.

Step 2: Use pre assigned RFID cards to unlock the door by touching RFID area of device.

Access Table >>

Total: 0 Prev Page: 1 Next

[Click here to Save Access Table](#)

[Delete](#) [Delete All](#)

Index	Name	ID	Department	Position	Location	Number	Fird Number	Access Code	Double Auth	Profile	Type	Issuing Date	Card State
-------	------	----	------------	----------	----------	--------	-------------	-------------	-------------	---------	------	--------------	------------

Add Access Rule

Name: Location:

ID: Number:

Card State: Fird Number:

Department: Access Code:

Position: Double Auth:

Type: Profile:

[Add](#) [Modify](#)

Fanvil